

## Retail Locations

New York, NY 10011  
16 W. 19th St.  
212-989-8500

Cambridge, MA 02141  
65 Bent St.  
617-576-2600

Philadelphia, PA 19147  
1400 S. Columbus Blvd.  
215-399-2155

Bensenville, IL 60106  
890 Supreme Dr.  
630-860-7458

Chicago, IL 60622  
1111 N. Cherry Ave.  
312-440-4920

San Francisco, CA 94110  
2001 Bryant St.  
415-643-9275

Santa Barbara, CA 93101  
228 E. Cota St.  
805-965-7053

Santa Ana, CA 92705  
1430 S. Village Way, Suite A  
714-285-0143

San Diego, CA 92025  
830 W. Valley Parkway  
760-737-6002

Los Angeles, CA 90038  
1135 N. Highland  
323-466-1238

**CALUMET**  
PHOTOGRAPHIC

1-800-CALUMET (225-8638)  
[www.calumetphoto.com](http://www.calumetphoto.com)

# TRAVELITE

## USER GUIDE



Description	Page
Introduction & Safety Notes	3
Control Panel Guide	4
Connecting and Using Your Travelite	5
Flash Power Control	6
Modeling Lamp Controls	6
Synchronization	6
Changing the Modeling Lamp	7
Changing the Fuse	7
Changing the Flash Tube	7
Mounting and Removing Reflectors	7
Travelite Accessories	8 – 9
Specifications	10 – 11

Dear Valued Customer,

Thank you for choosing the Calumet Travelite professional flash system. Accurate, ergonomic, powerful and simple to use, the Travelite was designed by working closely with photographers to develop a flash that meets the high standards demanded in professional studios today.

All 'S-Type' accessories from the Calumet/Bowens range can be used with the Travelite. For details of all related products, please call 1-800-CALUMET (225-8638), contact your local Calumet retail center or visit [calumetphoto.com](http://calumetphoto.com).

In order to obtain the full benefit from your purchase, please take a few moments to familiarize yourself with this user manual.

Thank you,  
Calumet Photographic

**ALWAYS**

- Always switch power off and disconnect from the supply before changing modelling bulb or flash tube.
- Always disconnect the supply before changing the fuse. Never replace with a fuse of a different rating.  
A spare fuse is fitted in the fuse holder under the AC inlet (see page 4).
- Always exercise care when handling equipment that has been in use. The reflector and front end of the unit can become Very Hot.
- Always avoid placing cables where they can be tripped over. Protect from heavy, sharp or hot objects, which may cause damage and replace damaged cables immediately.
- Due to the high voltage / high energy used in Travelites, all servicing must be carried out by a Calumet-authorized service center.
- Always remove the power cord by gripping the plug. NEVER pull the cord.
- Always ensure that any extension cord used has a suitable current rating to prevent overheating and never use coiled extension cords.
- Always remove the flash head covers before using.


**DO NOT'S**

- Do not use in an environment where moisture or flammable vapor is likely to come in contact with the unit.
- Do not plug your Travelite into an AC supply and a Travel-Pak battery at the same time.
- Do not restrict air vents while in use.
- Do not use a unit with damaged housing, moldings, flash tube or modeling lamp. If the unit is dropped or damaged in any way, always have it checked out before using.
- Do not operate the unit without a safe grounded AC supply.

## Rear Control Panel



## Side Control Panel

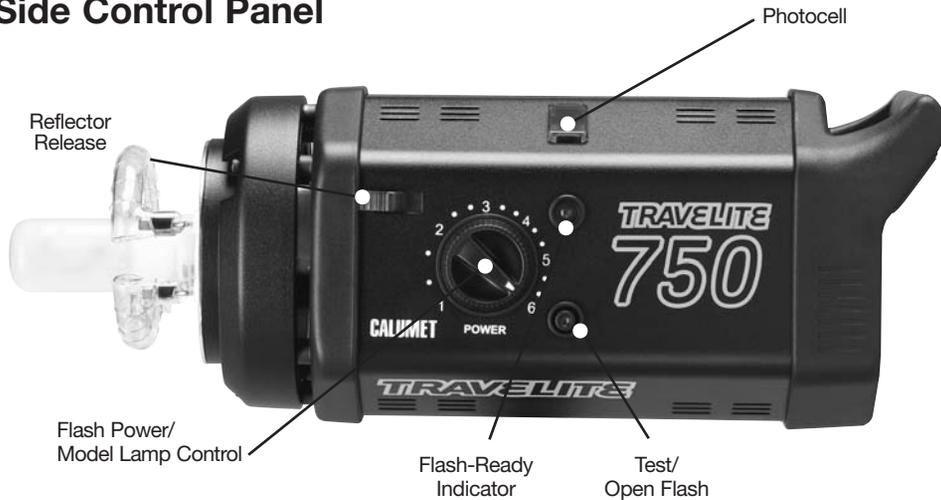

## Operating Your Travelite

The Calumet Travelite may be operated either on an AC supply or with a Calumet Travel-Pak

For AC operation, the AC switch (page 4) should be in the upper position I.

For battery operation the switch should be in the lower position II.

The center position is off.

**NOTE:** When operated from a battery source, the modeling functions are not available.

- Ensure the power source is off.
- Connect the unit using the appropriate cable.
- If using the Travel-Pak, ensure the connector locks are fully tightened.
- Switch the power source on, then switch on the Travelite.
- The unit will charge and indicate it is ready for use by illuminating the green flash-ready light.
- Press the test button to check the unit fires.



**WARNING HIGH VOLTAGE!** NEVER CONNECT THE TRAVELITE TO BOTH AC SUPPLY AND BATTERY SUPPLY AT THE SAME TIME. THIS APPLIANCE MUST BE GROUNDED WHEN USED WITH AC. DISCONNECT THE AC PLUG WHEN CHANGING MODELING LAMPS AND FLASH TUBES.

## Mounting Your Travelite

**Mount your Travelite on a dependable support system**

The mount bushing on the L-bracket allows for two possible ways of mounting to the stand/support (RIGHT).

Method B may be found useful if the light is required to point down.

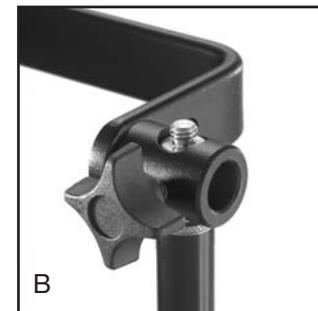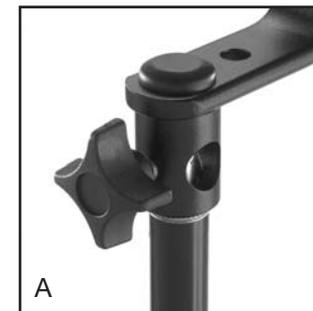

## Flash Power Control

The flash-power output level is variable over 5-stops, from full to 1/32 power. The maximum power available depends upon the model (See specification table) and is denoted by the number 6 on the control panel. The power settings are denoted in 1/3-stops. The numeric divisions indicate full-stop divisions.

When switched on from either AC or battery supply, the unit will charge. Once the unit has charged to the desired power level, the green flash-ready lamp will illuminate indicating that the unit is ready to fire.

**NOTE:** If the unit is subjected to rapid operation over extended periods, it may automatically go into an overheat condition. In this condition, the flash-ready lamp will illuminate to indicate the presence of power, while the charging and modeling functions are disabled in order to allow the unit to cool. The unit will automatically resume operation once cooled sufficiently.

In an overheat condition, the unit will typically take 15 minutes to cool down. By switching the unit off and then on again after approximately 5 minutes, the unit can be re-activated in order to get a few extra shots if needed.

## Modeling Lamp Controls

With the modeling lamp control switch (see Rear Control Panel, page 4) in the upper position the modeling light is off. With the switch set to center, the modeling light stays on all the time. With the switch set in the lower position, the lamp will go out when the unit is flashed and come back on when the unit comes to ready. This enables the photographer to see from the camera position that all Travelite units in use have fired. The modeling light may set to full power or ratioed to the flash tube setting by using the Full/Proportional switch on the rear control panel. With the switch in the upper position, the lamp is proportional to flash output, while in the lower position, the lamps stay at full output regardless of power setting selected.

## Synchronization

There are several ways to trigger your Travelite

### Open Flash:

For testing or multiple-flash applications the open-flash button can be used.

### Sync Socket:

The standard 1/4" socket on the rear panel of the unit may be used for direct connection to a camera set to 'X' synchronization. Two Travelites may be connected together using a 'Y' connector. An Infrared receiver or flash slave may also be plugged into this socket. The socket operates at +5V and is safe for use on digital cameras.

### Built-in Photocell:

The Travelite has a built-in switchable photocell enabling the unit to be triggered by the flash from any other flash unit or a small camera mounted flash gun. It is mounted behind the red transparent cover on the top of the unit. The photocell on/off switch is located on the rear control panel.

## Changing the Modeling Lamp

Switch off Travelite and disconnect from the power supply. Screw modeling lamp into ES lampholder in the center of the reflector. Allow lamp to cool before removing.

**NOTE:** It is recommended that a Photoflood or Halostar bulb with a maximum wattage of 275 watts is used. The manufacturer will not accept liability on the use of any lamp with a greater wattage than 275.

## Changing the Fuse


The modeling and flash circuitry is protected by a single 10-amp fuse mounted on the rear panel. Never replace the fuse with one of a different rating. As the fuse may blow when the modeling lamp fails, always check the fuse when replacing the bulb. A spare fuse is supplied in the fuse holder. Always switch the unit and disconnect the Travelite unit from the power supply before changing the bulb or fuse.

## Changing the Flash Tube

Ensure that the unit is switched off and disconnected from the AC supply and then wait thirty minutes before touching/removing flash tube. Remove the protective cap and unwind the twisted trigger wire from the flash tube support. Gently pull the flash tube assembly out of the unit. To replace the assembly, hold the flash tube as shown and taking care to support both legs of the tube, gently but firmly, push the flash tube into position, and wind the trigger wire around the flash tube support.

Always replace with the correct flash tube assembly:

UV-Coated **BW1498** Clear **BW1499**

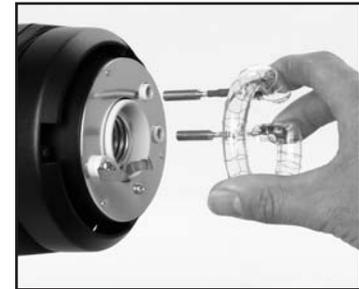

## Mounting and Removing Reflectors

A range of reflectors is available for your Travelite. To mount, slide the neck of the reflector over the front of the unit. Align the three pegs on the reflector with the three slots in the retaining ring. Press down and turn clockwise to lock.

To remove reflector, pull back reflector-release (page 4), turn the reflector fully anti-clockwise and withdraw.

If an umbrella is to be used, a 6" Umbrella reflector should be mounted and the umbrella fitted through the hole in the mounting bracket on the reflector and locked in position with the knurled screw.

**NOTE:** Take care when mounting and removing reflectors not to damage the flash-tube assembly. The flash tube is very delicate, avoid unnecessary handling of the glass tube. Always switch the unit off and disconnect from power supply before fitting and changing reflectors.

**WARNING HIGH VOLTAGE!** DO NOT TOUCH THE FLASH TUBE ASSEMBLY FOR 30 MINUTES AFTER DISCONNECTING FROM SUPPLY.

## LiteLink Radio Trigger System

### LiteLink Radio Trigger System

With the Travelite you are free from AC power cables. With the Calumet LiteLink Radio Trigger system you can free yourself from sync cables too!

This multifunctional device can be used to trigger flash units, film and digital cameras and light meters up to 300' away. Because LiteLink is a radio transmitter, rather than IR, it allows for triggering around corners or through walls and is not affected by high ambient- light situations. Choose from four individual channels, each providing a unique ID for different flash devices or combine them to trigger all equipment within a given setup or studio.

Because of its low-voltage operation, it is perfect for digital cameras. Each unit can be used as either a transmitter or receiver and operates off of two AAA batteries. **LiteLink (Set of 2) CE1560**



## The Travel-Pak



### Also available for the Calumet Travel-Pak:

- Travel-Pak Booster Battery **CE1109**
- Travel-Pak-to-Travelite Spare Cable **CE1111**
- Universal 2-Amp SLA Charger **CE1108**

### The Travel-Pak

The Travelite is great in the studio, but what if you need to work on location? Thanks to this handy battery pack, your Calumet Travelite can leave the studio to go on location anytime, anywhere!

Able to power two Travelites simultaneously with a total power of up to 1500w/s, the Travel-Pak is capable of bringing a 375w/s unit to full charge as fast as 4 seconds, and can offer in excess of 200 flashes on a single charge.

With a fast/slow charge option to prolong battery life as well as a carry bag offering protection from the elements and up to 3" of water, no location photographer should be without this unique power pack.

Dimensions: 7.1(l) x 4.75(w) x 6.9(h)"

Weight: 9 lbs.

Travel-Pak **CE1107**

## Reflectors

Calumet's light-control reflectors are built to withstand many years of rigorous, daily use. They feature extremely strong housing and steel bayonet-type mounts for quick, positive mounting. The inner steel ring provides additional durability for frequent reflector changes. From studio sets to location sites, Calumet's comprehensive system of accessories can handle any situation or assignment.

Visit [calumetphoto.com](http://calumetphoto.com) for the widest range of photographic lighting accessories



6" Umbrella Reflector (120°)  
**CE1885**



7" Grid Reflector  
**CE18630**



Back-Lite Reflector  
**CE2560**



9 1/2" Reflector (50°)  
**CE1886**



High Performance Reflector  
**BW1878**



8" Reflector (60°)  
**CE1887**



15" Soft-Lite Reflector  
**CE1899**



17" Sunlite Reflector (40°)  
**CE1868**

# TRAVELITE



Unit
Maximum Stored Energy
Sync Voltage
Flash Color Temperature
Circuit Protection
Supply Voltage
Voltage Stabilization
Guide Number (Full Power, 50° Keylite, ISO 100)
Typical Recycle Time (Full Power)
Modeling Power Control
Flash Duration (t=0.5, Full Power)
Flash Power Control
Modeling Lamp
Flash-Ready Indication
User Replaceable Flash Tube
Photocell
Audio-Ready Signal
Recommended Modeling Lamps
Weight
Dimensions (l x w x h)

## Travelite Specifications Comparison Chart

	Travelite 375	Travelite 750
	375w/s	750w/s
	5V	5V
	5600 K ±300 K	5600 K ±300 K
	115V - 10A (T)	115V - 10A (T)
	95-130V AC 60Hz	95-130V AC 60 Hz
	±1%	±1%
	220	350
	1.7 sec.	2.1 sec.
	Full / Intermittant / Off	Full / Intermittant / Off
	1/900	1/600
	Full to 1/32 (5 stops)	Full to 1/32 (5 stops)
	Max 275w	Max 275w
	100%	100%
	Clear = BW1499 UV = BW1498	Clear = BW1499 UV = BW1498
	On/Off	On/Off
	On/Off	On/Off
	275w Photoflood 250w Halostar	275w Photoflood 250w Halostar
	6.4 lbs.	7.5 lbs.
	15.13 x 6.75 x 5"	15.13 x 6.75 x 5"

Due to our policy of constant product improvement, Calumet Photographic reserves the right to change equipment specifications at any time and without notice.